

DS001 RX MULTI

Tabla1: Selección de Marcas

Table1: Brands' selection

ITEM	SELECTION DIP SWITCH	BRAND	FREQ	NOTES
1		NICE FLORS	433.92 MHz	
2		MARANTEC	433.92 MHz	
3		Universal Fixed Code Código Fijo	433.92 MHz	Fixed Code
4		FAAC SLH Rolling Code	433.92 MHz	
5		Liftmaster	310 MHz	
6		Liftmaster	390 MHz	
7		Liftmaster	433.92 MHz	
8		Universal Rolling Open Code	433.92 MHz	Open Code
9		Universal Rolling Open Code	315 MHz	Open Code
10		Universal Rolling Open Code	318 MHz	Open Code
11		Universal Rolling Code ASK	868 MHz	Open Code
12		Universal Rolling Code FSK	868 MHz	Open Code
13		Universal Fixed Code Código Fijo	300 MHz	Fixed Code
14		Universal Fixed Code Código Fijo	310 MHz	Fixed Code
15		Universal Fixed Code Código Fijo	315 MHz	Fixed Code
16		Universal Fixed Code Código Fijo	318 MHz	Fixed Code
17		Universal Fixed Code Código Fijo	330 MHz	Fixed Code
18		Universal Fixed Code Código Fijo	390 MHz	Fixed Code
19		Universal Fixed Code Código Fijo	868 MHz	Fixed Code
20		Liftmaster Rolling Code Billioncode	390 MHz	
21		Liftmaster Rolling Code	315 MHz	
22		Hormann Marantec Berner	868 MHz	

DS001 RX MULTI

23		FAAC SLH	868 MHz	
24		Prastel	433.92 MHz	
25		Sommer	868.80 MHz	
26		Sommer	434.4 MHz	
27		Liftmaster Rolling Code	868.30 MHz	
28		Clemsa Mastercode	433.92 MHz	
29		DITEC	315 MHz	
30		DITEC	390 MHz	
31		DITEC	433.92 MHz	
32		V2	315 MHz	
33		V2	390 MHz	
34		V2	433.92 MHz	
35		MARANTEC	868.30 MHz	
36		Aprimatic Encrypted Code	433.92 MHz	
37		Aprimatic Encrypted Code	868.3 MHz	
38		JCM TECH	868.3 MHz	
39		P.N.C	868.3 MHz	
40		MAP	868.3 MHz	

DS001 RX MULTI

41		FORSA	868.3 MHz	
42		ALMA	868.3 MHz	
43		DMIL	868.3 MHz	
44		CEA	868.3 MHz	
45		Roper	868.3 MHz	

NOTA: Para dar de alta el mando de la marca FAAC en el RX MULTI seguir los siguientes pasos:

- 1- Presionar al mismo tiempo los canales 2 y 3 del mando de FAAC, el mando comenzará a parpadear.
- 2- Presionar en el RX MULTI el canal donde se grabará el mando. El led se quedará fijo.
- 3- Presionar varias veces el botón del mando de FAAC que quiera grabar.

NOTE: To programme a FAAC remote in the RX MULTI please follow the next steps:

- 1- Press at the same time channels 2 and 3 on the FAAC remote, the remote LED will start flashing.
- 2- Press in the RX MULTI the channel where you want programme the remote. The LED stays fixed.
- 3- Press several times the button of the FAAC remote you want to programme.

RX MULTI